

Use the Autocom CDP+ in harmony with Autocom software.

Package Options

		BASIC	PLUS	MAX
MAINTENANCE MODULE	Service schedules (OEM-based) Smart links to Adjustment Data Printable work sheets Links to generic parts	●	●	●
ADJUSTMENT DATA	Emission data Wear limits Wheel alignment settings Torque settings	●	●	●
RECALL DATA	Recalls (OEM-based)	●	●	●
LUBRICANTS & FLUIDS	Capacities and viscosities Qualities and alternatives	●	●	●
COMPONENT DATABASE	Adjustment data per component Engines, transmissions, brakes, axles and steering systems	●	●	●
MY TRUCK/MY TRAILER	Configuration tool Vehicle database Parts Memo tool	●	●	●
FUSES & RELAYS	Fuse and relay box locations Fuse and relay overview		●	●
TECHNICAL DRAWINGS	Torque settings		●	●
REPAIR MANUALS	Clutch; removal/installation Transmission; removal/installation and others Engine assembly; removal/installation Single view presentation		●	●
WIRING DIAGRAMS	ABS/EBS Engine management Pan and Zoom functionality Highlight functionality to trace corresponding wires and components		●	●
REPAIR TIMES	Time overlap calculation Service times Links to generic parts			●
LCV	Vehicles up to 3,500 kg Full data coverage			●

		BASIC	PLUS	MAX
IDENTIFICATION	VIN and identification plate locations VIN decoder	●	●	●
MAINTENANCE MODULE	Maintenance schedules (OEM-based) Printable work sheets Links to generic parts Follow-up tasks Additional tasks	●	●	●
ADJUSTMENT DATA	European type approval data Emission data Tyre sizes and pressures	●	●	●
LUBRICANTS & FLUIDS	Capacities and viscosities	●	●	●
RECALL DATA	Link to fault codes and related cases	●	●	●
SERVICE BULLETINS (SMARTFIX)	Technical Service Bulletins Link to fault codes and related cases	●	●	●
ORGANISER XPRESS (COST ESTIMATE TOOL)	Repairs Maintenance Parts list Total times	●	●	●
REPAIR MANUALS	Timing belt; removal/installation Timing chain; removal/installation Ancillary drive belt; removal/installation Clutch; removal/installation Manual transmission; removal/installation	●	●	●
REPAIR TIMES	Overlap technology Manual times Link to cost estimate tool			●
FUSES & RELAYS	Fuse and relay box locations Fuse and relay overview		●	●
TECHNICAL DRAWINGS	Links to generic parts Torque settings		●	●
GUIDED DIAGNOSTICS (VESA)	Wiring diagrams; Engine Management, Brakes, Airbag and Air conditioning Component locations and information		●	●
COMFORT WIRING DIAGRAMS	Full colour wiring diagrams covering e.g. climate control, radio, door locks, airbags, anti-theft, headlights		●	●
REAL LIFE CASES (SMARTCASE)	Verified fixes and tips Link to fault codes and related cases			●
WORKSHOP ORGANIZER	Work orders / cost estimates incl. • Repairs • Maintenance • Links to parts catalogue		• Total times • Customer and vehicle database • Calendar planning	●